



FDP 0001 A


F.01U.500.374




BOSCH

cs	Instalační manuál Krycí deska	it	Manuale di installazione Finta piastra di copertura
da	Installationsmanual Kunstig dækplade	nl	Installatiehandleiding Dummy-afdekplaat
de	Installationsanleitung Blindabdeckung	no	Monteringsinstruksjoner Blinddeksel
el	Οδηγίες συναρμολόγησης Ομοίωμα καλύμματος	pl	Instrukcja instalacji Oślona modułu
en	Installation Guide Dummy Cover Plate	pt	Manual de Instalação Placa de cobertura falsa
es	Manual de Instalación Placa de cubierta falsa	ro	Manual de Instalara Placă de acoperire fictivă
fi	Asennusohjeet Peitelevy	ru	Инструкция по установке Глухая внешняя накладка
fr	Manuel d'installation Plaque de recouvrement factice	sl	Priročnik za montažo Nepravi pokrov
hr	Priručnik za instaliranje Prazna prednja ploča	sv	Installation manual Dummy-täckplatta
hu	Telepítési kézikönyv Fedő lemez	tr	Kurulum kılavuzu Paravan kapak plakası


CPH 0006 A

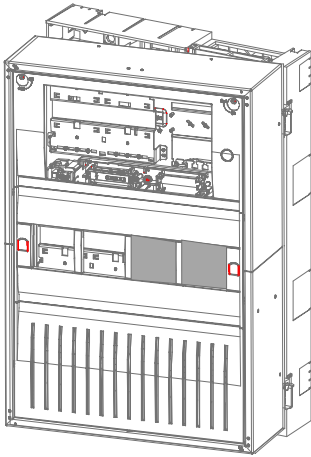


MPH 0010 A

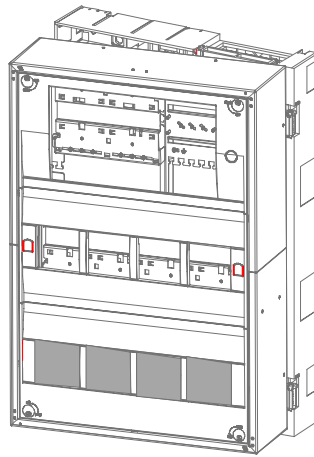


EPH 0012 A

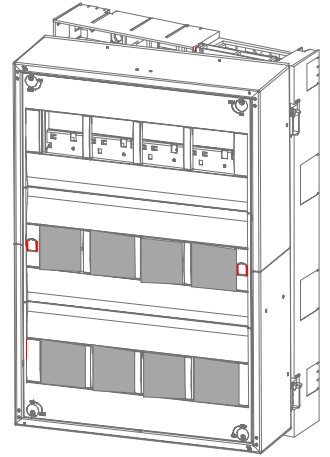


HCP 0006 A





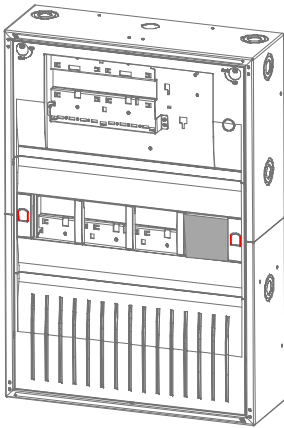


HBC 0010 A

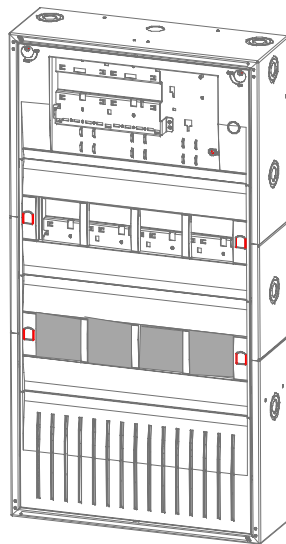

HBE 0012 A

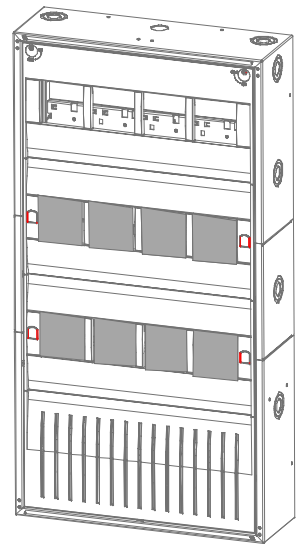

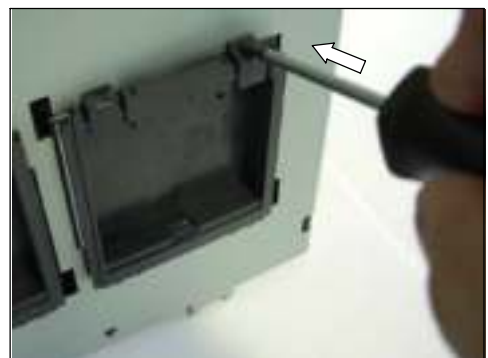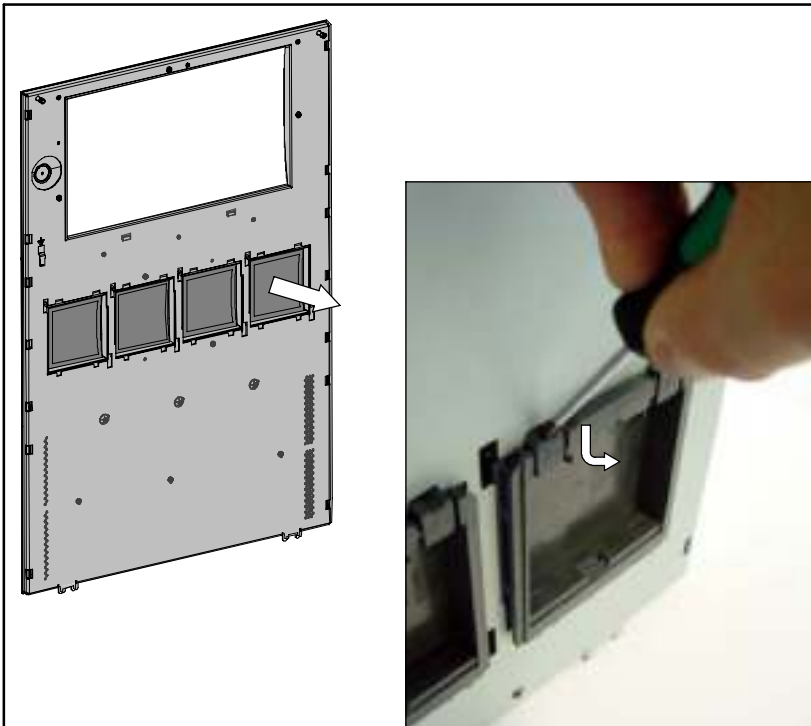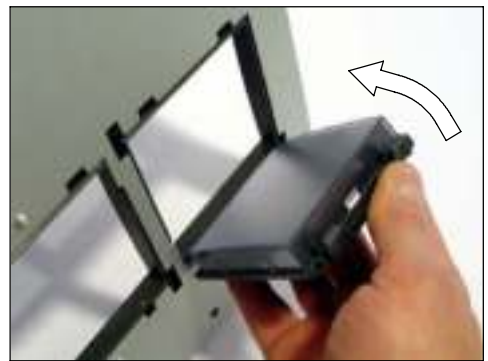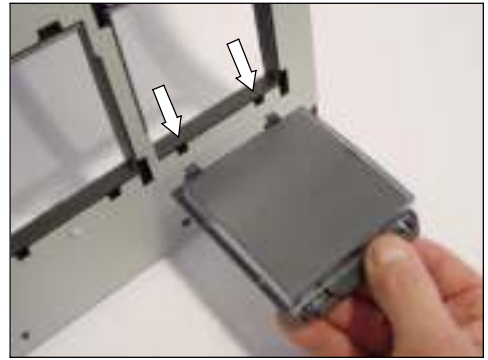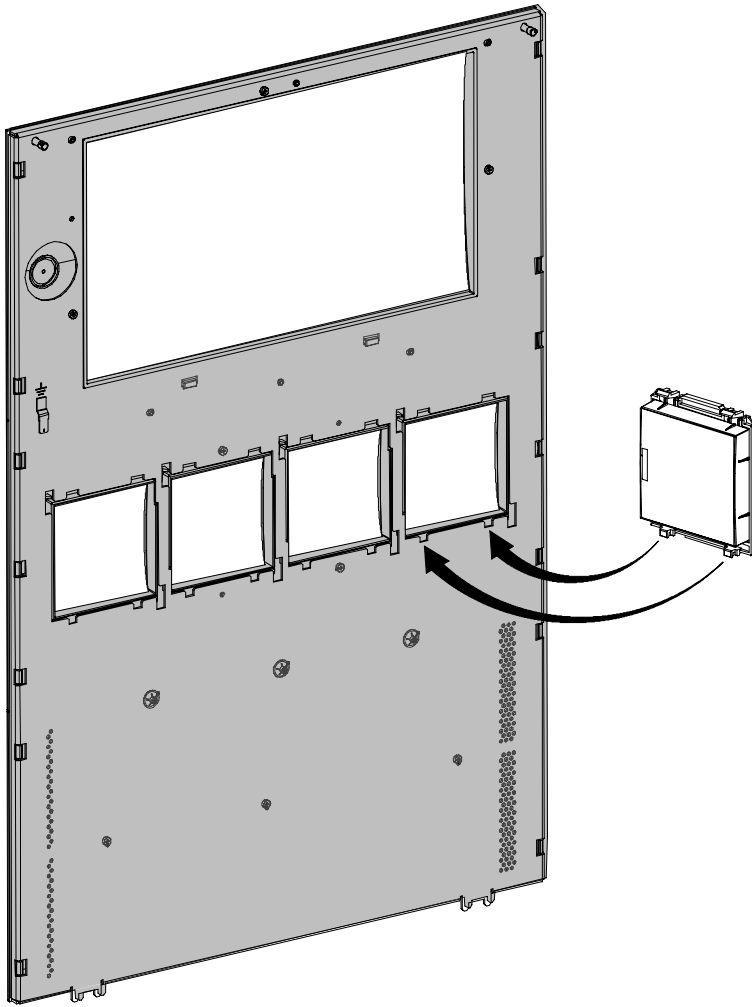

Bosch Sicherheitssysteme GmbH

Robert-Koch-Strasse 100

DS-85521 Ottobrunn

Germany

Telefon +49 (0)89 6290-0

Telefax +49 (0)89 6290-1020

www.boschsecurity.com

©Bosch Sicherheitssysteme GmbH, 2009